



## Configuration BC961 F12



Restore Factory Default Configuration



RS232



Factory Default



France



Transmit System Character"0"



NONE



^&051&^

可传输键盘功能键

Keyboard function key



^&308&^

Add Prefix setting



^&48C&^

Funtion key F12



^&305&^

保存并结束设置

**Saved and Finished Set**